


PARTS IDENTIFICATIONS

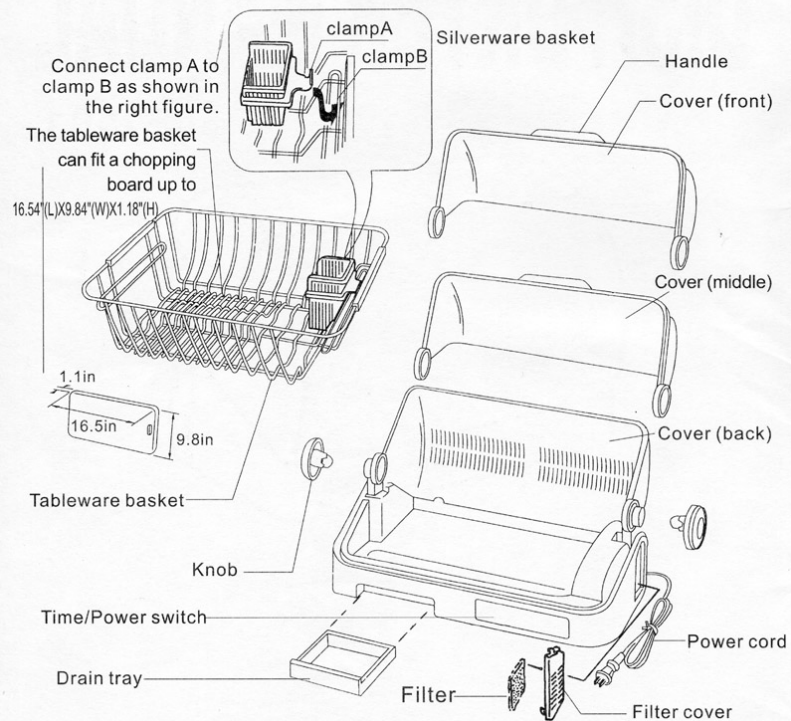

STANDARD QUANTITY OF TABLEWARE (8 PERSONS)

Large dishes (7.5"~10") /2 pcs. Salad dishes (6"~7.5") /6 Pcs,
Bread dishes (6"~below) /6 pcs ;Bowls /6 pcs ,Soup bowls /6 pcs;
Chopsticks, forks, Spoons /6 pcs each; Chopping Board etc.


INSTRUCTIONS FOR USAGE

1. Drain Tray

- Drain water tray before each use.
- The capacity of drain tray is 300 ml and only enough for one load.
- If the drain tray is not constantly emptied, water may leak during the operation.




2. INSTALLATION FOR TABLEWARE, CHOPPING BOARD

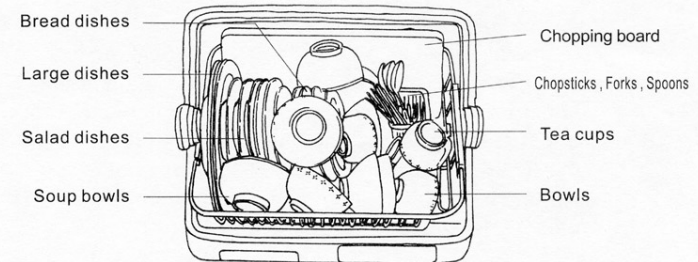

PRECAUTIONS

- Do not stack dishes together. Place dishes between the pins.
- Do not use any baskets other than the original units.
- Do not place chopsticks, forks, and spoons out of the silverware basket.
- Securely open or close the cover by grasping the handle.

 ■ MICROCOMPUTER



1. "AUTO 20 min. 60 min. off" indicates the timer of the circulation. When press "Timer" button once, the automatic function will be on. Press "Off" button once, the fan will stop running after 10 seconds.
2. Press "AUTO" button once, the timing and temperature will be automatically set.
3. Press "20 min." button once, the electric heater and fan will operate for 15 min, then only the fan for the last 5 min.
4. Press "60 min." button once, the electric heater and fan will operate for 55 min, then only the fan for last 5 min.
5. In the function "AUTO", the dish dryer will run for 35 min when the room temperature is at 77° F.
6. The unit is out of order when the LED lights flash. Please unplug it and reset it after repair.

Cause A : The wind inlet is blocked or the fan no longer works .
As a result ,temperature switch is too hot and then damaged.
Cause B : The fuse is blown.


Figure A. "AUTO" → PROPORTION OF "TEMPERAURE" AND "TIME"

Room Temperature	95°F	86°F	77°F	68°F	59°F	50°F
	↕	↕	↕	↕	↕	↕
Rounding Time	25min.	30min.	35min.	40min.	45min.	50min.
	(The difference of rounding time is ± 5%)					

"IF the power cord is damaged , it must be replaced by the manufacturer or its authorized service agent in order to avoid any hazard."


PRECAUTIONS FOR USE

Do not place dishcloths/ duster under the unit.

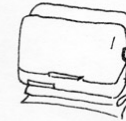

Poor circulation may cause the unit to warp.

Use the unit on a level and sturdy surface.

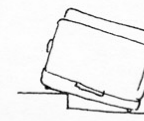


It may cause poor ventilation and drainage.

Do not place the unit on the microwave.



It may cause the unit to be destroyed or deformed.

 Do not place the unit in an area that will block the air outlet.



Poor circulation may cause the unit to warp.

Do not place clothes/duster inside the case or on top of the covers.



Poor circulation may cause the unit to warp.


Do not dry the following items which can easily be damaged by heat.

- Plastic items
- Glasses with great difference of thickness (crystal glass, sculpted glassware)
- Lacquer wares

These items can cause harm to the dish dryer.

■ How to install the dish dryer:

- Place the unit on a sturdy surface with enough room to open the front cover.
- Keep the unit away from anything that easily catches fire as shown in right figure.

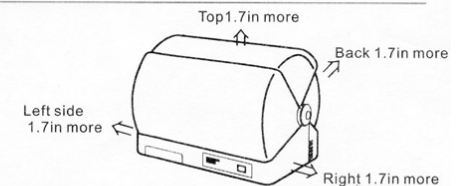


HOW TO USE THE DISH DRYER

Clean dishes with warm/ hot water.




Remove water thoroughly

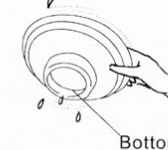

Especially the bottom of dishes before putting in the

 Place the dishes in the basket and properly use the spaces between the pins.



■ CAUTION Please constantly keep the dish dryer clean

COVER INSTALLATION

1. Place the spring peg in between the two plastic notches on the right bracket of the back cover.

2. Put the right side of the middle cover on first. Make sure the square notch presses against the spring peg.




3. Slightly pull out the middle cover to make it go over the edge of the back cover. Then place the slot over the bracket.

※NOTE: After installing the middle cover, try to roll it backward. If the middle cover does not turn back automatically when release, you must reinstall it.

4. Place the front cover over the middle cover and place the slot over the bracket.

5. Insert the knobs into the brackets.


※NOTE: Wipe the covers with soft cloth. It is best to not dismantle the covers if unnecessary.

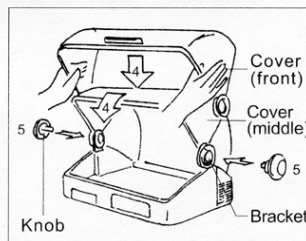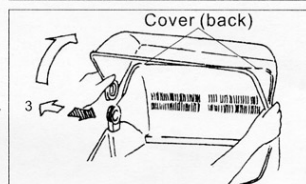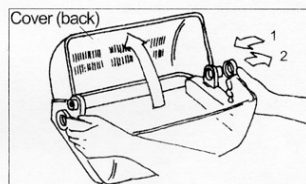

FILTER

■ CAUTION: Clean the filter once a month (hand wash only)

1. Remove filter from the filter cover.
2. Clean filter with water.
3. Reinstall filter when it is dry.

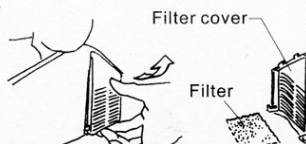

■ CAUTION Please constantly keep the dish dryer clean

COVER INSTALLATION

1. Place the spring peg in between the two plastic notches on the right bracket of the back cover.

2. Put the right side of the middle cover on first. Make sure the square notch presses against the spring peg.




3. Slightly pull out the middle cover to make it go over the edge of the back cover. Then place the slot over the bracket.

※NOTE: After installing the middle cover, try to roll it backward. If the middle cover does not turn back automatically when release, you must reinstall it.

4. Place the front cover over the middle cover and place the slot over the bracket.

5. Insert the knobs into the brackets.


※NOTE: Wipe the covers with soft cloth. It is best to not dismantle the covers if unnecessary.

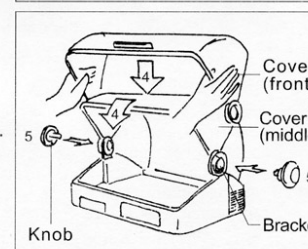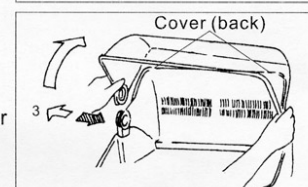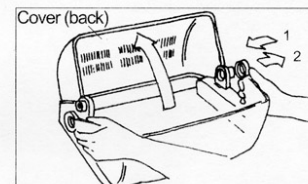

FILTER

■ CAUTION: Clean the filter once a month (hand wash only)

1. Remove filter from the filter cover.
2. Clean filter with water.
3. Reinstall filter when it is dry.

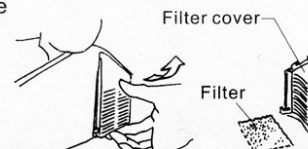

SPECIFICATIONS

Power consumption	120V 60HZ 150W
Capacity	About 7-8 persons
Safety equipment	Self-resetting thermostat
Cord length	59"
Size	L 20"x W 15"x H 15"
Weight	9.7 lb

Precaution

If detect sparks , unusual smell , burning , or warping , unplug the unit immediately. If the problem persists , please contact an authorized service office.

Instruction

- 1.120V,60Hz,150W.
- 2.Do not immerse in water.
- 3.This appliance has a polarized plug (one blade is wider than the other).To reduce the risk of electric shock , this plug is intended to fit in a polarized outlet only one way. If the plug does not fully fit in the outlet, reverse the plug. If it still dose not fit, contact a qualified electrician. Do not modify the plug in any way.